



POINT LOADS A & B VALID AT ANY POINT ALONG THIS SEGMENT OF THE TRUSS. POINT LOADS ARE APPLIED TO TOP CHORD OF TRUSS IN MATRIX ANALYSIS.