


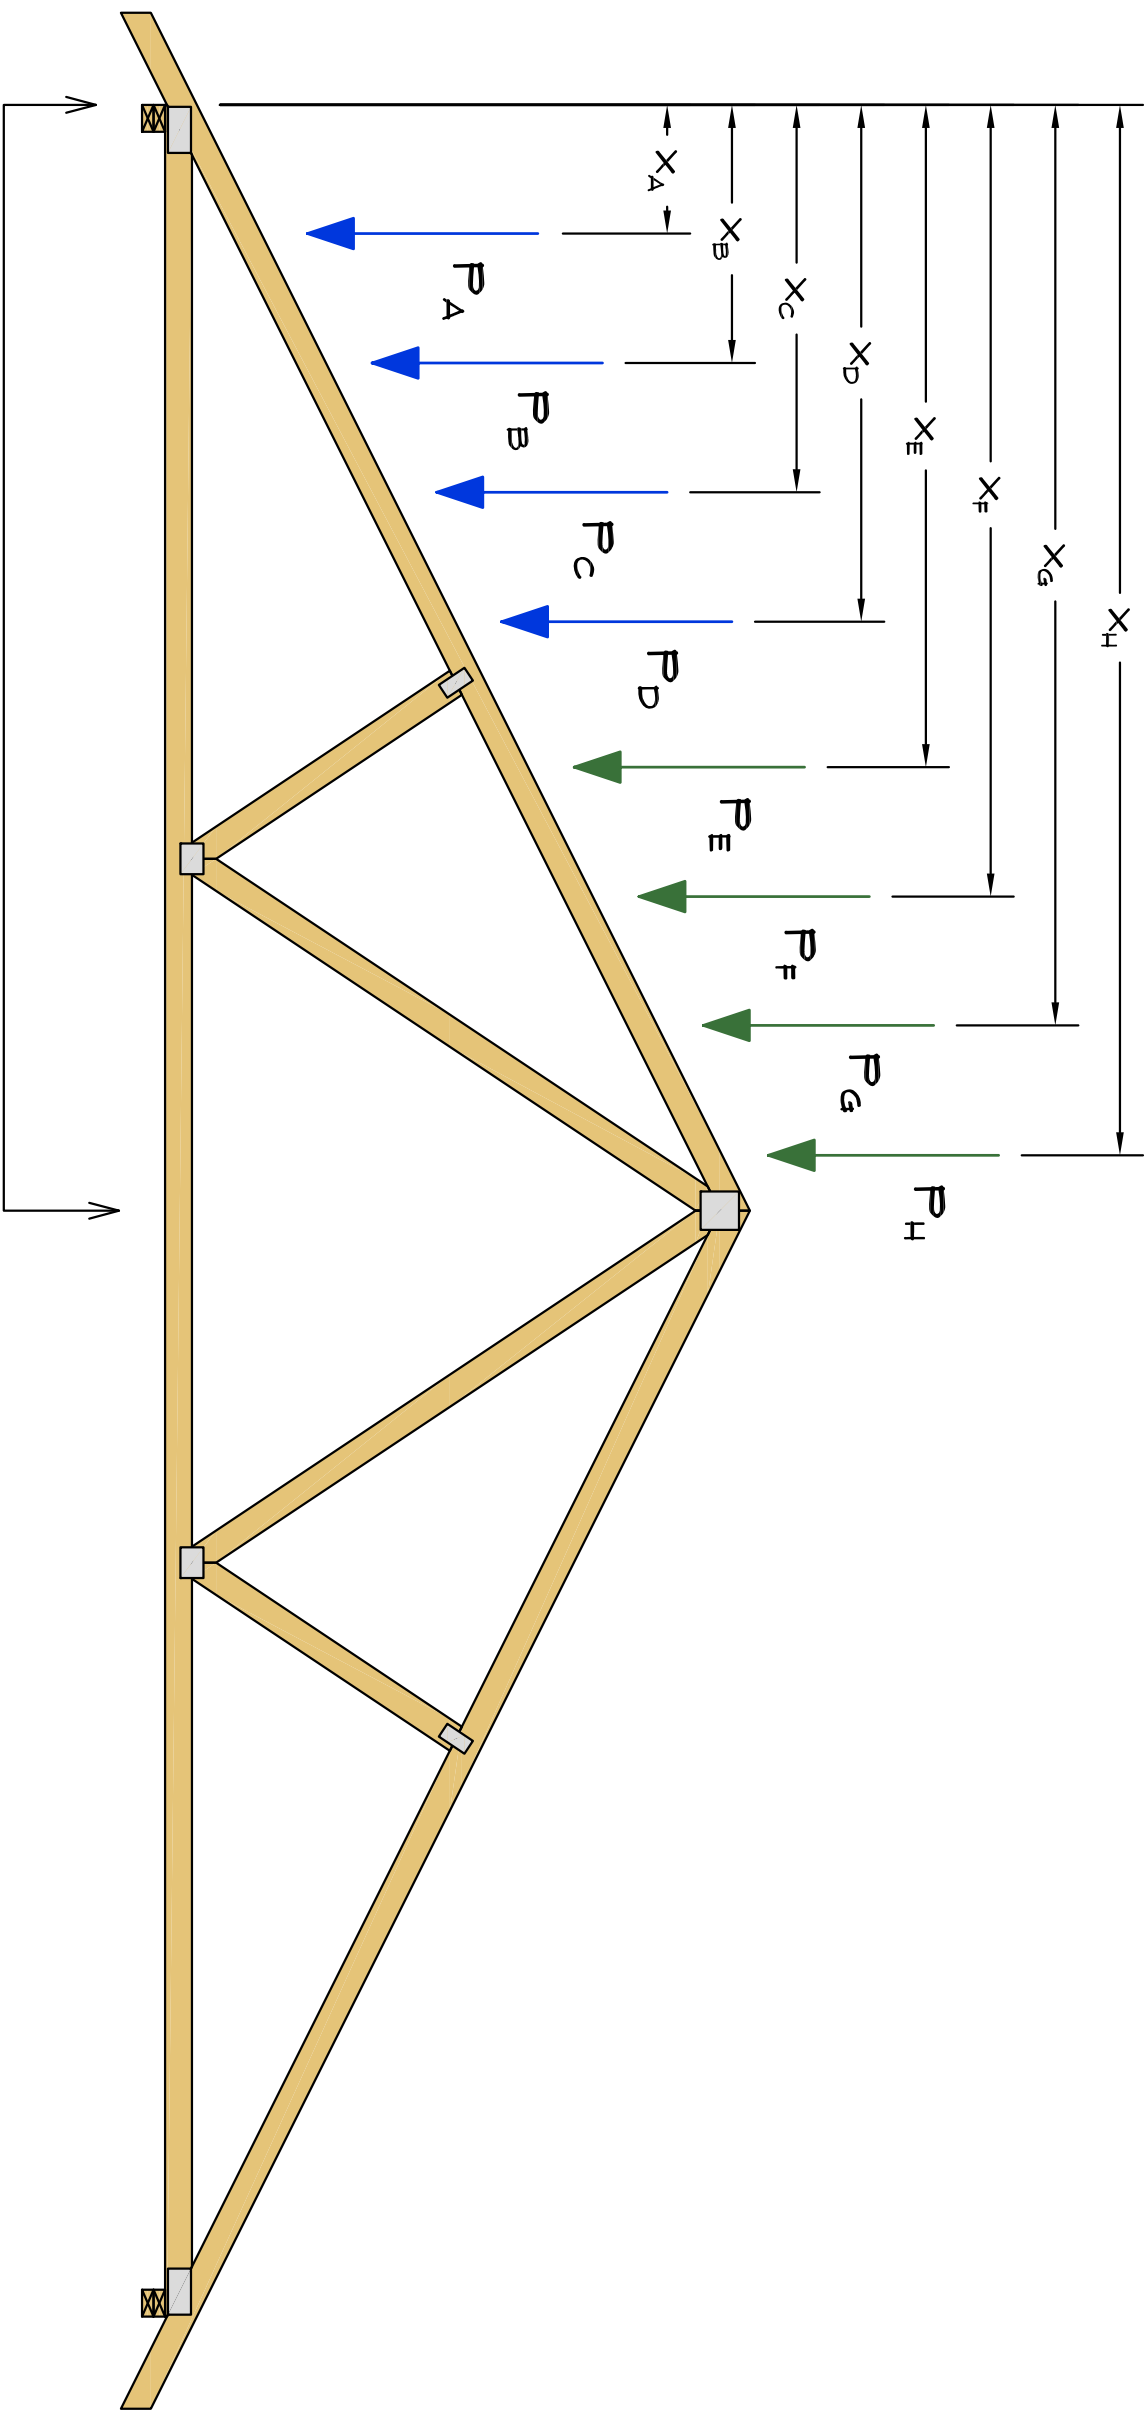

POINT LOADS A THRU H VALID AT ANY POINT ALONG THIS
SEGMENT OF THE TRUSS. POINT LOADS ARE APPLIED TO TOP
CHORD OF TRUSS IN MATRIX ANALYSIS.